


TG Series partial extension undermount slides installation


Drawer installation dimensions(with peg)

SKW = Internal Drawer Width LW = Internal Cabinet Width

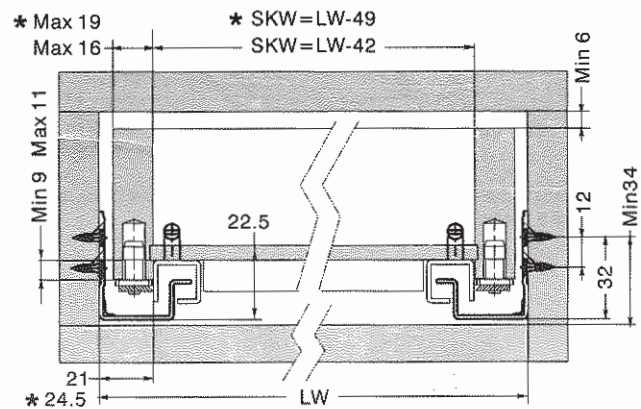


* * : Installation for drawer with max 19mm thick drawer side

With peg installation

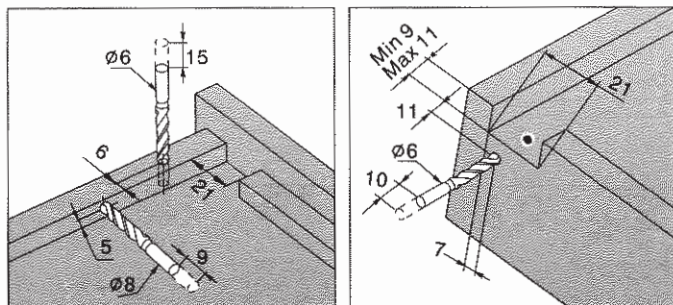


Drawer installation dimensions

NL = Nominal Slide Length LT = Internal cabinet Depth $LT_{min} = NL + 3$

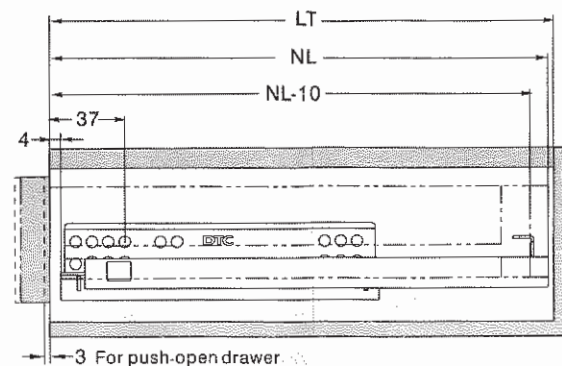


Inner drawer installation dimensions

NL = Nominal Slide Length LT = Internal cabinet Depth $LT_{min} = NL + 21$

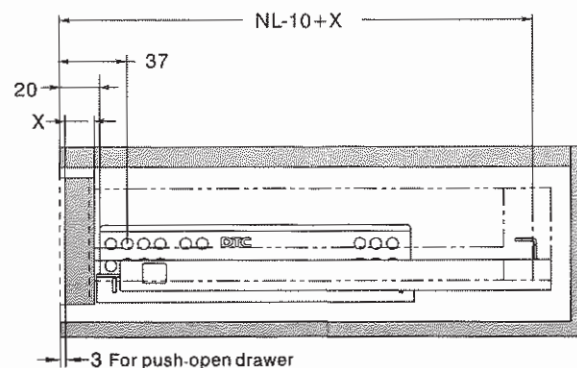

Drawer preparation

Soft close drawer

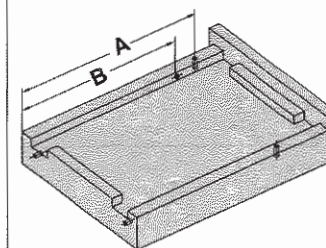

NL (mm)	A (mm)	B (mm)
250	220	188
270	230	198
300	245	213
350	270	238
400	305	273
450	330	298
500	355	323
550	390	358
600	415	383

DTC


GUANGDONG DONGTAI HARDWARE PRECISION MANUFACTURING CO., LTD.

Tel.: +86(0)757-25332283 Fax: +86(0)757-25551876


E-mail: dte@dtdtc.com Website: www.dtdtc.com

302710001-01820

Screw Positions of the Slides

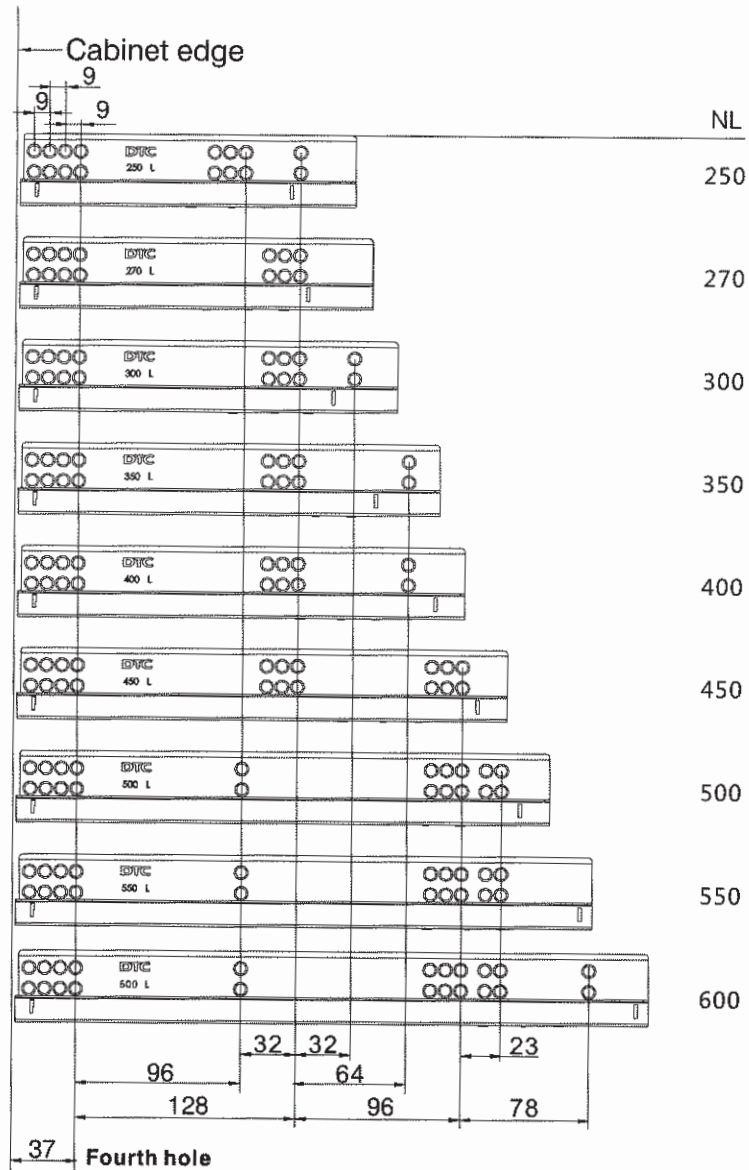


Fixing hole position for inner drawer




Drawer assembly and removal(with peg)


1. Fix the slide onto the cabinet.

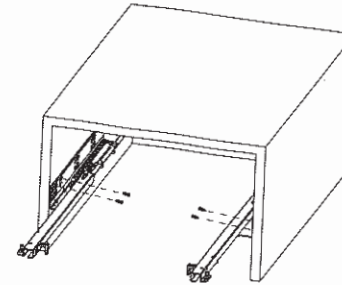

2. Pull out the drawer member of the slide from the cabinet, lay the drawer onto the slide.

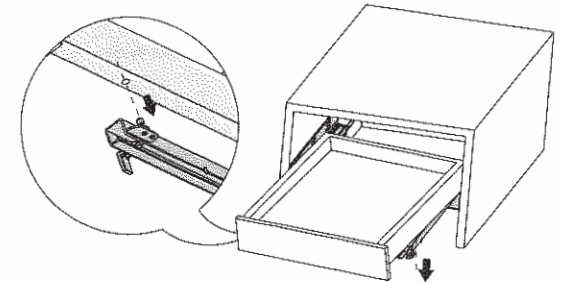

3. Press the locking pin into the drawer side to lock the position of the drawer.

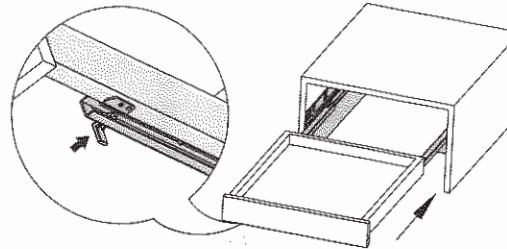

4. For removal, pull out the locking pin from the drawer side. Lift the drawer and pull it out from the cabinet.

